

Spontaneous Chain Orientation of Aromatic Polyimides Evolved during Thermal Imidization from Shear-Oriented Glassy Liquid Crystalline Precursors

Ryohei Ishige¹, Kazuyuki Tanaka¹, and Shinji Ando¹

(¹Department of Chemical Science and Engineering, Tokyo Institute of Technology)

Introduction: Highly oriented films of polyimide (PI) were used for variable functional materials such as alignment layers of liquid crystalline displays (LCDs), optical retardation plate, etc., owing to the high thermal and chemical resistances, size stability, and mechanical strength. In this study, we developed novel liquid-crystalline (LC) precursors of a PI to aim highly oriented large-area films by simple shearing method at room temperature and investigated the mechanism of the orientation enhancement during imidization by means of in-situ variable temperature (VT) polarized Fourier transform infrared spectroscopy (pFTIR) and wide-angle X-ray diffraction measurements using synchrotron beam (SR-WAXD).

Experimental and methods: The LC precursors, PM_m, with (CH₂)_mH side chain (**Fig. 1**) were synthesized by conventional solution polycondensation process.¹ In-situ VT SR-WAXD were conducted in BL-6A beamline of Photon Factory (KEK, Tsukuba, Japan) and a FT/IR-4000 spectrometer (JASCO, Japan) was used for pFTIR spectroscopy measurements to evaluate the uniaxial orientation order parameter; $S = (3\langle\cos^2\theta\rangle - 1)/2$, θ is an angle between symmetric axis and molecular axis, and $\langle...\rangle$ represents statistical average. The value S reaches unity for perfect orientation and zero for a random sample.

Results and discussions:

The concentrated solutions (40–50 wt%) of PM_m in NMP exhibited lyotropic LC phase and the phase diagrams (conc. vs. temp.) based on polarized optical microscope observation had similar feature to theoretical prediction for semi-flexible molecules in the solution.¹ Particularly, PM10 solution exhibited the widest LC region from r.t. to over 100°C at 60 wt% and hereafter we focused on PM10. The oriented film of viscous solution of PM10 was prepared on a substrate at r.t. and then

used for in-situ SR-WAXD and pFTIR. SR-WAXD method selectively provides the S value in oriented region in the sample, whereas pFTIR provides that in whole region. These S exhibited same value before imidization (<270°C in **Fig. 2**), indicating that the film was homogeneous and did not contain amorphous region dissimilar to conventional semi-crystalline polymers. Furthermore, during imidization, the S value of precursor segments once decreased and then increased again, whereas that of PI segments spontaneously and monotonically increased from 0.5 to 0.9 (>270°C in **Fig. 2**) even for free-standing films. This unique phenomenon distinctly differs from the behavior of conventional amorphous PI precursors. In the present case, the rigid PI segments with longer persistence length spontaneously grow along the n -director of the LC matrix of the precursor and a kink structure occurs between the precursor and PI segments, which induce a temporal decrease in S of precursor segment during imidization (schematic mechanism in **Fig. 2**). In the late stage of imidization, these S values reached equal value. This methodology is useful to prepare highly oriented homogeneous film in large scale and can be applied to various aromatic polymers involving intramolecular cyclic reactions or polymerization followed by an increase in the persistence length.

Reference: [1] Tanaka, K.; Ishige, R.; Ando, S. *Macromolecules* **2019**, *52*, 5054–5066.

Spontaneous Chain Orientation of Aromatic Polyimides Evolved during Thermal Imidization from Shear-Oriented Glassy Liquid Crystalline Precursors

Ryohei Ishige¹, Kazuyuki Tanaka¹, and Shinji Ando¹ (¹Dept. Chem. Sci. Eng., Tokyo Institute of Technology, E4-5, 2-12-1Ookayama, Meguro-ku, Tokyo 152-8552, Japan)

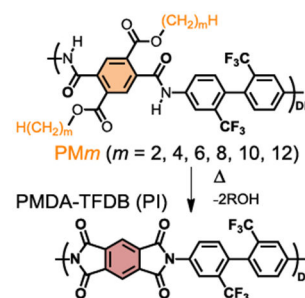


Fig. 1 Chemical structure of PM_m and resultant PI.

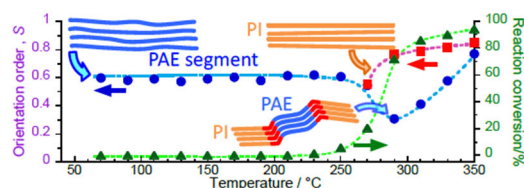


Fig. 2 Temperature evolution of S value of precursor and PI segments. Schematic drawings for the mechanism of orientation enhancement are inset.